 


SORAMA L642 Quick Installation Guide

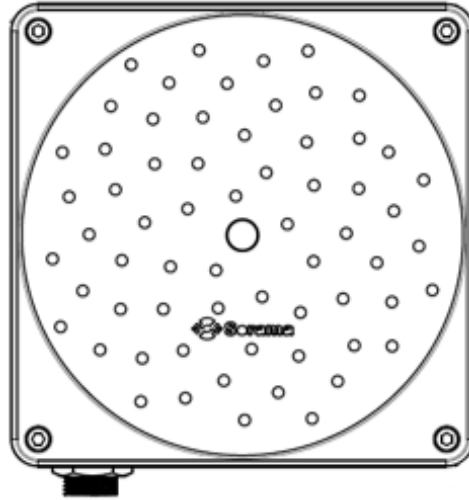

Content of the box


- L642
- Male RJ45 connector
- Quick Installation Guide

Before you start

- Make sure the L642 is connected to a PoE+ Network switch or a PoE+ power injector
- Make sure your computer is connected to the same ethernet subnet as the L642
- Wait until the indicator light (on the side of the L642) becomes solid green.

SORAMA L642 Quick Installation Guide


- 1 Keep the **serial number** of the L642 ready.
Serial number can be found on the back of the device or on the side of the box.

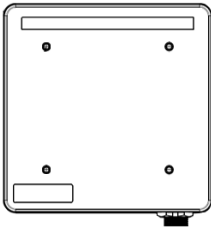

- 2 Open your web browser:
Chrome, Firefox, Edge, Safari




- 3 Type **http://<serial number>** in your address bar.
E.g. **http://100110001**

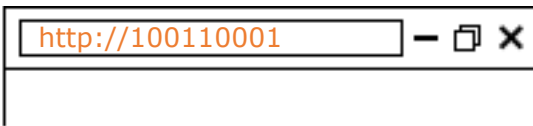


If your network does not have DNS server or if you connected the device directly to your PC add **.local** at the end of the serial number address.
E.g. **http://100110001.local**

- 4 Your browser will now show the device dashboard and prompt you to login.


The **default credentials** are:
Username: **user** and Password: **user**

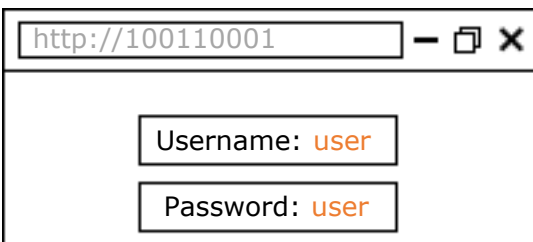


- 5 In the device dashboard go to the settings page and click on device information.

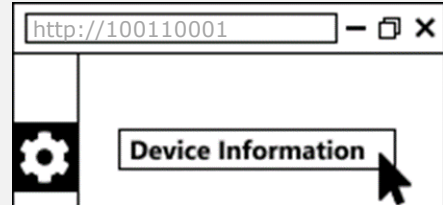

- 6 Set the device coordinates and relevant installation information such as angles and target distances (if known).

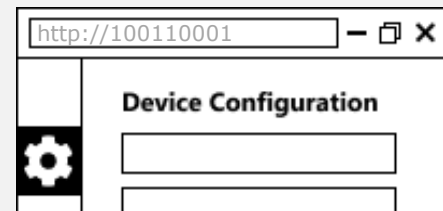

- 7 Go back to the settings page and click on Networking.

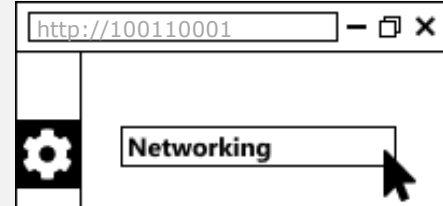

- 8 In the Network page set the preferred network settings according to your project. See section 4 of the manual for more details and options.



For more information please refer to

Sorama.eu/dev

Or scan the QR code!

